



[Link to Instruction Video](#)



CRKT®

PERSEVERE™
AXE/SURVIVAL SYSTEM

12 Simple Steps to Assemble the Backcountry Survival & Camp Tool.

Step 1

Find a 1-1.5" Diameter
Live Branch... Cut to
18" Long.

Product Includes:

- Axe Head
- Round Peg
- 2 Wedge Unites
- Paracord
- Nylon Sheath

**Only use live green fresh wood
branch for tool assembly. Rotten
wood is unsafe and unfit for tool
usage. Nothing off the forest floor.*





Step 2

Drive Axe Wedge in 3".

Step 3

Cut a "V" Shaped Notch
for the Front Round Peg.





Step 4

Insert Paracord into Wood Slot, pull Tight to Secure the Knot, Tie Two Half-Hitches.



Step 5

Use Two Half-Hitches for
Tying off the Paracord base.



Step 6

Insert Center Peg into
Axe Head.

Step 7

Slide Axe into Wood Slot,
Match Peg with V-Notch.



Step 8

Add Two Wedges with Top Notch Facing Outward.





Step 9

Tie at Least Two Half-Hitches
Around the Top of the Tool.



Step 10

Run Paracord Over Wedge
Notches to Secure the Tool.



Step 11

Secure Paracord Over Back
Side of Wedge Notches.

Step 12

Wrap Extra Paracord Down the
Wood Handle and Tie Off.



WARNINGS:

The axe blade included with this kit is sharpened. Please handle with care to avoid inadvertent cuts or injuries.

In assembling the Persevere Axe Tool, please follow all instructions carefully. We strongly encourage you to watch the video assembly instructions, which can be found on the product page on our website: <https://www.crkt.com/persevere> or directly at this YouTube link: <https://tinyurl.com/persevereaxe>.

We also recommend that you assemble the tool at least once at home before taking the kit with you on your next outing.

As noted in the instructions, use only live green fresh wood branch for tool assembly. Rotten wood is unsafe and unfit for tool usage. Nothing off the forest floor. Use extra care in driving the sharpened axe wedge into the end of the branch that will serve as the axe handle. Please ensure that the branch remains intact after the three-inch slot has been made. If either side of the slot is not stable, please select another branch and start over. Once the axe is assembled, check the paracord to ensure it is tightly wound and check that the axe blade is secured in a fixed position. If the blade is loose, you need to retighten the assembly. If the blade is not secured in a fixed position, the axe could come apart in use and cause injury to yourself or others.

Columbia River
Knife & Tool

18348 SW 126TH PLACE, TUALATIN, OREGON 97062
1-800-891-3100 | CRKT.com