

Please read these instructions thoroughly, regardless of how you intend to carry the knife. If you are using the sheath with the MOLLE locks (Fig. 1) then the rubber washer goes between the MOLLE Lock and the sheath. Compress it to about 1/2 of its thickness when you tighten. DO NOT use the rubber washers with the optional MOLLE back (Fig. 2). ONLY carry in inverted mode (upside down) when using the MOLLE back and extra retentions (Velcro strap, pommel cover) included on the MOLLE back.

MOLLE Locks




Figure 1

MOLLE Back (Optional)




Figure 2

Sheath Only

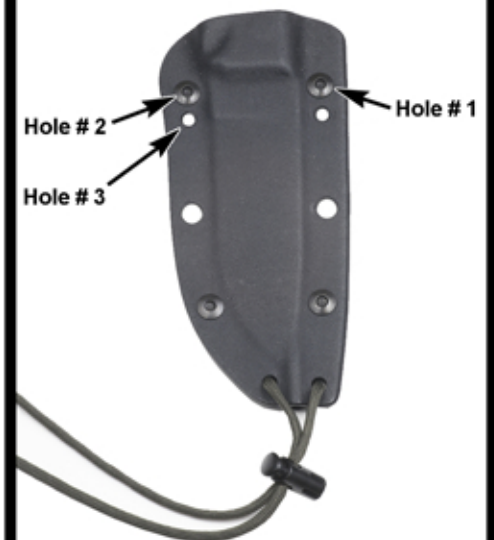

Move the screw in Hole # 2 to adjust sheath tension. Hole # 2 will provide a tighter lockup than Hole # 3. Screw in Hole # 1 is a spare screw.


MOLLE Locks Vertical

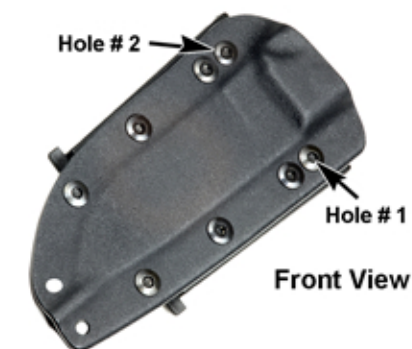

If looser knife retention is desired remove screw from Hole # 2.



MOLLE Locks Horizontal

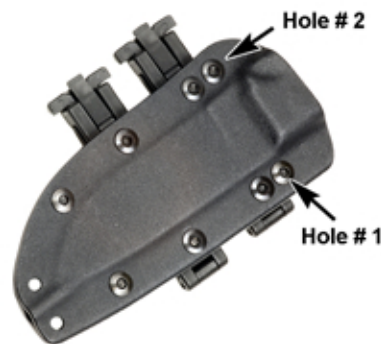

If looser knife retention is desired remove screw from Hole # 2.



Paracord Lashing (To belt or pack)



Cord may also be used as a lanyard